



# Table Base Assembly Instructions

## Disc Base Threaded Rod Method



Scan for help

### Suggested Tools


- Adjustable Wrench or
- 3/4 Deep Socket
- 2 x Blocks to Raise Base
- Safety Glasses

1. Make sure you have all the pieces shown on your order's packing list. Contact [Tablebases.com](http://Tablebases.com) if any pieces are missing.
2. Carefully balance your table base bottom on blocks, so that the center hole in the base is accessible from the top and bottom.
3. Carefully balance and center the column on top of the base, then center the mounting plate on top of the column.
4. Take your threaded assembly rod, and slide it down through the mounting plate, through the column, and through the hole in the center of your base bottom\*.
5. Thread the removable nut and any included washers\*\* onto the end of the assembly rod underneath the base, and tighten by hand. Make sure the column and mounting plate are centered, then fully tighten the nut with your wrench.

\*Note: For most bases, the assembly rod will have a square welded end, and a threaded end for the removable nut. Put the removable nut underneath the base. For Argent series bases, insert the rod up through the bottom of the base, and put the removable nut at the top of the base on the mounting plate. Some large bases or bolt down models may have two assembly rods.

\*\* Some models do not require washers for assembly.

If you ordered a model with "extra heavy" in the name, you will also receive a weighted disc. Insert the weighted disc under your base plate before threading on the removable nut and any included washers.

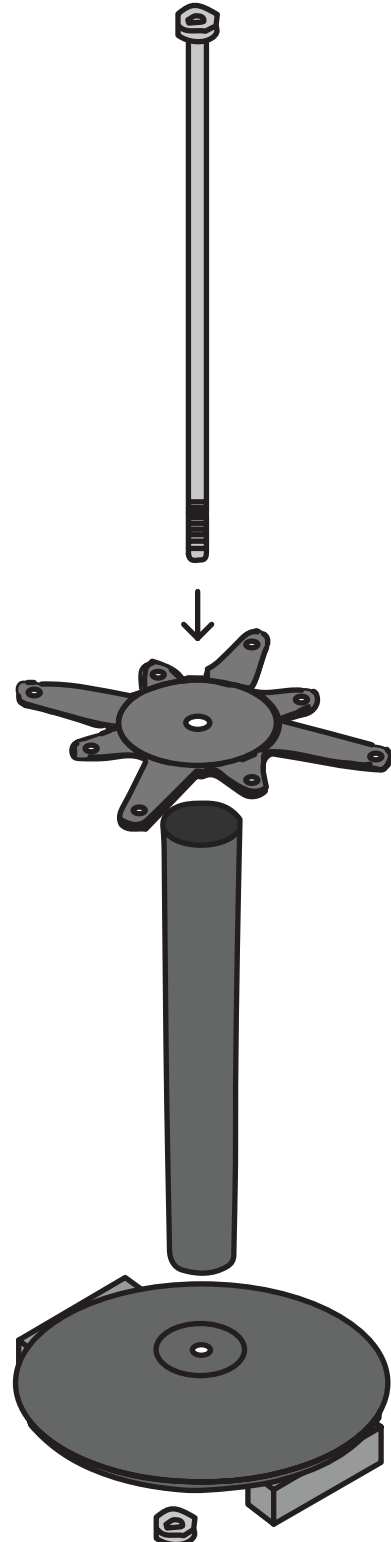

Contact [Tablebases.com](http://Tablebases.com) Customer Service for Assistance  
1-800-258-2320 | [Support@Tablebases.com](mailto:Support@Tablebases.com)