



Argent Series Assembly Instructions

Reverse Threaded Rod Method



Scan for help

Suggested Tools


- Adjustable Wrench or
- 3/4 Deep Socket
- 2 x Blocks to Raise Base
- Safety Glasses

1. Make sure you have all the pieces shown on your order's packing list. Contact Tablebases.com if any pieces are missing. Assembly is easiest with two people.

2. Thread the base bottom over the assembly rod, with the square end of the rod underneath the base bottom, and the rod oriented up. Place the base bottom on blocks so that the underside of the base is accessible.

3. Place the column over the rod and center it on the base bottom. Carefully place the mounting plate on top of the column, with the rod threading through the center hole in the mounting plate*.

4. Thread the removable nut and any included washers** onto the threaded end of the assembly rod and tighten by hand. Make sure the column and mounting plate are centered, then fully tighten the nut with your wrench.

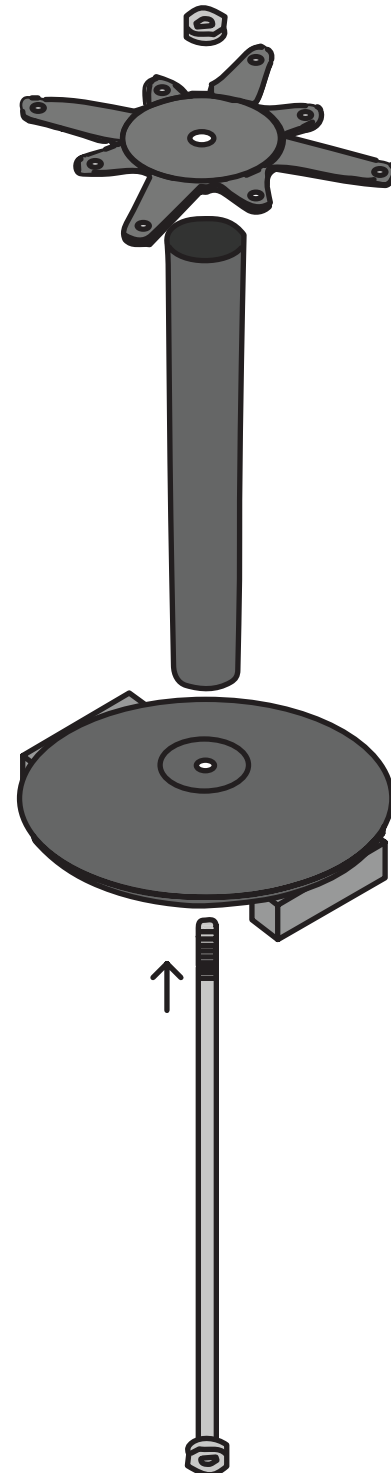

*Note: If your assembly rod has removable nuts at both ends (instead of a welded square at one end), it can be used in either direction. Some Argent-28 models may have two assembly rods.

** Some configurations do not require washers for assembly.

Contact Tablebases.com Customer Service for Assistance
1-800-258-2320 | Support@Tablebases.com

©2023 Tablebases.com